

Dough scraper - Lucky Baking

Article number: 504295

Wood / silicone – not dishwasher safe
Size: 25 cm

Description

Flexible and stable at the same time. Thanks to the soft silicone lip, creams and doughs can be easily removed from containers and spread. With the sturdy handle made of beech wood you have everything under control.

Our kitchen helpers are made of high-quality beech wood. The dough lip is made of food-safe silicone and is temperature-resistant from -40°C to $+170^{\circ}\text{C}$.

We advise to wash up the kitchen helper with a mild detergent and a dishcloth or a dishwashing brush after use.

Note regarding our wood products: Wood is a natural product and therefore can differ in shape and colour.

Fixed on cardboard for hanging up.

