

Linzer cookie cutter – Spitzbub cookie cutter – smooth – with change motives

Article number: 954107

POM plastic – food safe – dishwasher safe
Size: ø 4 cm

With 3 attachable shapes

Description

With these cookie cutters you can cut out both parts of the famous Linzer cookies. Just press the desired motive into the outer ring – and off we go! For cleaning, you can disassemble the cutter. With the outer ring you can now cut out the lower part of the Linzer. Bake both parts and put them together with the help of jam, marmelade, icing or nougat cream. Enjoy baking and decorating!

You can find delicious recipes in our recipe portal.
This cookie cutter is made of high quality plastic. We advise to wash up the cutter with running, warm water straight after use.

In folding box for hanging up. With instructions.

