

Camping happiness – Cooking spoon Mobile home – Pointed

Article number: 800120

Material: cherry tree
Size: 30 cm
Surface: oiled

Description

A traditional wooden kitchen utensil is still the best choice. This natural and sustainable material is durable, robust and protects bowls, pots and pans. These high-quality kitchen gadgets are Made in Germany from cherry wood and oiled with high-purity white oil. We recommend cleaning the kitchen helper with warm water, a mild washing-up liquid and a dishcloth after use. NOT suitable for the dishwasher.

Note on this wood product: Wood is a natural product and can therefore vary in shape and colour. High-purity white oil ensures a high level of safety when it comes into contact with food and in this respect fulfills the legal regulations.

Fixed on cardboard for hanging up.



Manual

NOT dishwasher safe. We recommend cleaning the kitchen helper with warm water, a mild washing-up liquid and a dishcloth after use.