

Product information

Article number: 800212

Camping happiness - Cooking spoon Caravan - Round

Material: cherry tree

Size: 30 cm Surface: oiled



Description

A traditional wooden kitchen utensil is still the best choice. This natural and sustainable material is durable, robust and protects bowls, pots and pans.

These high-quality kitchen gadgets are Made in Germany from cherry wood and oiled with highpurity white oil. We recommend cleaning the kitchen helper with warm water, a mild washing-up liquid and a dishcloth after use. NOT suitable for the dishwasher.

Note on this wood product: Wood is a natural product and can therefore vary in shape and colour. High-purity white oil ensures a high level of safety when it comes into contact with food and in this respect fulfills the legal regulations.

Fixed on cardboard for hanging up.





Manual

NOT dishwasher safe. We recommend cleaning the kitchen helper with warm water, a mild washing-up liquid and a dishcloth after use.

Tel. +49 6407 4034-1000

Fax +49 6407 4034-1009 E-Mail: info@staedter.de